



MONITOR ST & MONITOR SR CONNECTIONS

CUE MIX FEED, OR ANY AUXILIARY MONITORING SOURCE

EXTERNAL TB REMOTE (SOLD SEPARATELY)





TB MIC OUTPUT



TO HEADPHONE DISTRIBUTION SYSTEM



INPUTS 1-4 CAN BE USED FOR ANY ANALOG 5.1 OR STEREO SOURCES. THE DSUB CONFIGURATION IS 1-LEFT, 2-RIGHT, 3-LEFT REAR, 4-RIGHT REAR, 5-CENTER, 6-LFE

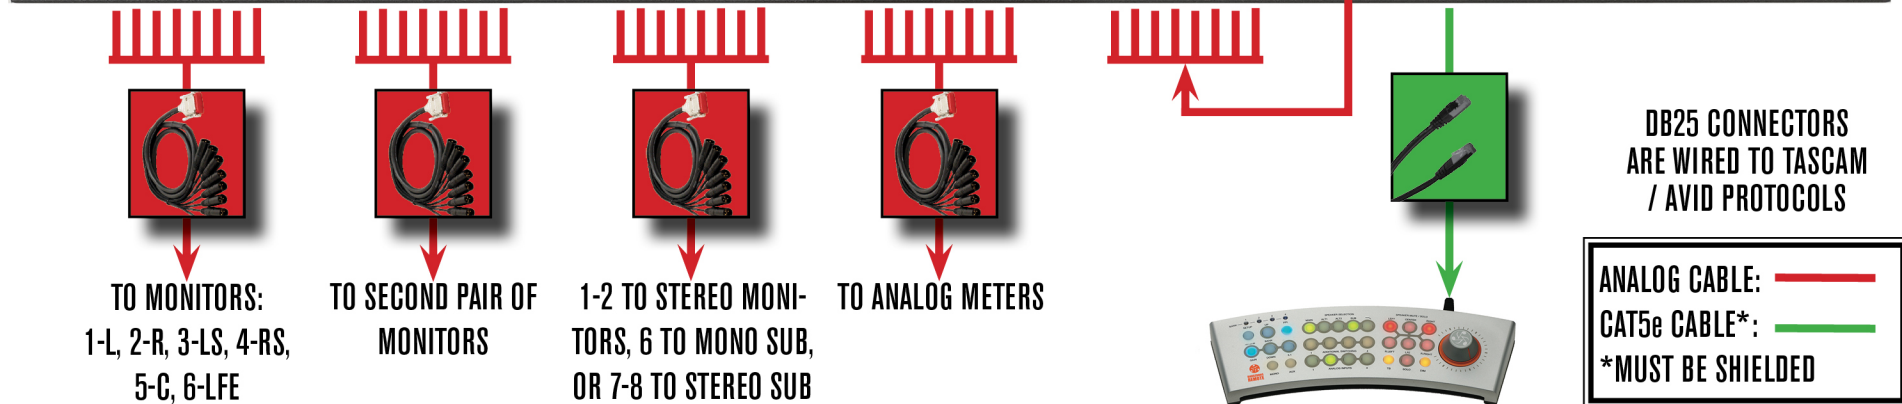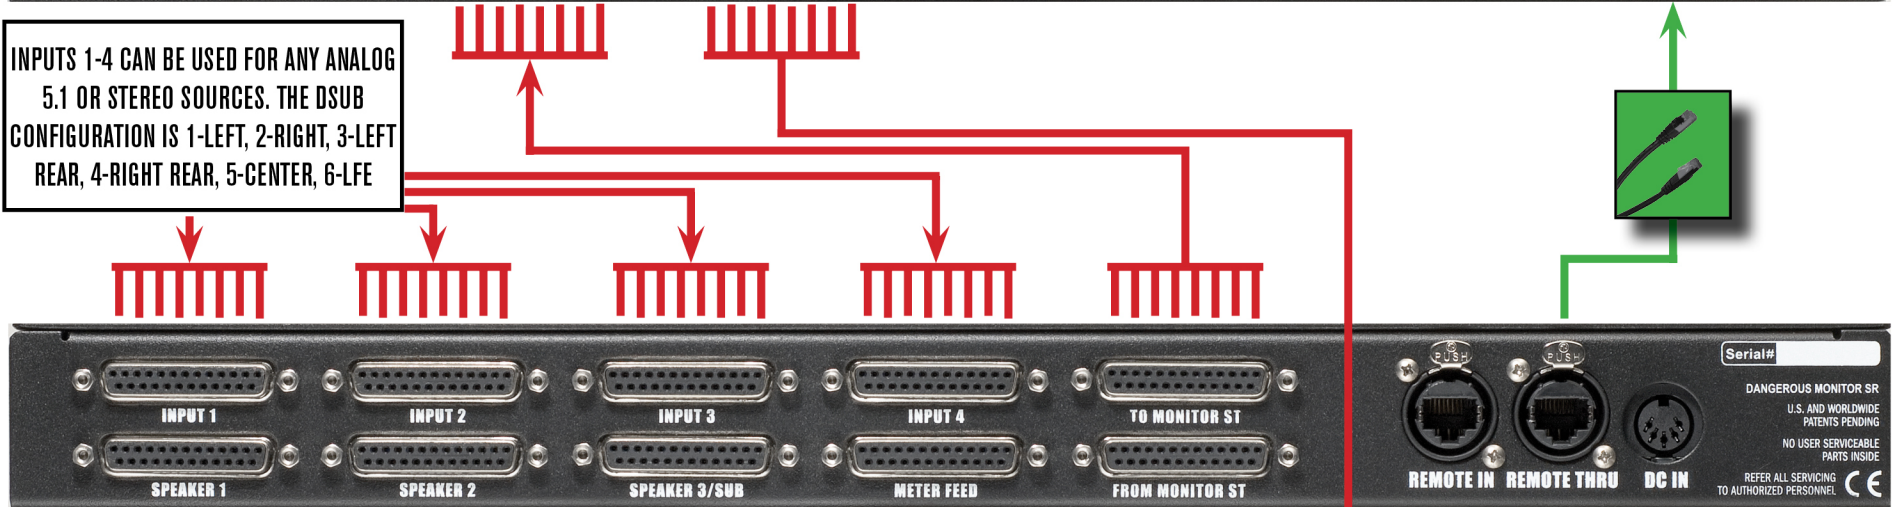

DB25 CONNECTORS ARE WIRED TO TASCAM / AVID PROTOCOLS

ANALOG CABLE: —
CAT5e CABLE*: —
*MUST BE SHIELDED

TO MONITORS:
1-L, 2-R, 3-LS, 4-RS,
5-C, 6-LFE

TO SECOND PAIR OF
MONITORS

1-2 TO STEREO MONI-
TORS, 6 TO MONO SUB,
OR 7-8 TO STEREO SUB

TO ANALOG METERS

